



# Gumdale State School Tennis Courts


## HOW TO USE THE PADLOCK

1 Key in the access code (see your booking email)

2 Press the Unlock icon (bottom RHS)

*Once unlocked*  
- status light flashes green  
- ascending tone sounds

3 Pull up the hasp

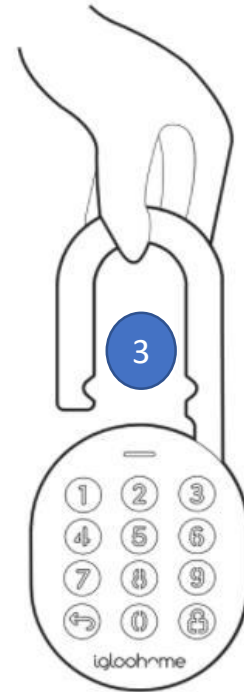

Remember: re-close the padlock if you are last to leave.  
If you have difficulty entering the court – call 0450 017 440.

# Gumdale State School Tennis Courts



## HOW TO USE EXTERNAL KEYPAD TO TURN ON LIGHTS

### Indicator Light

**Red** Light flashes 3 times  
= **Incorrect** PIN entered

**Blue backlit Keypad**  
Power is **ON**



### Indicator Light

**Green** light displays = Correct  
PIN entered

### Indicator Sound

Keypad buzzes = **Incorrect** PIN  
entered

### # Key

checks PIN code validity

1

Refer to booking confirmation  
for Light activation PIN code

2

Key in the 8 digit light code  
(from your booking email)

3

Press the # key (*bottom RHS*)

✓ **Indicator light flashes green = correct PIN code**  
× **Indicator light flashes red (3 times) = incorrect PIN code**  
or **Keypad buzzes = incorrect PIN code**